

Energy efficient dishwashers

Energy star rating labels

The energy rating label on dishwashers rates the energy efficiency of these appliances on a scale of one to six stars. The energy figure inside the red box shows energy consumption in kilowatt-hours per year. More stars and a low energy consumption figure means a more energy efficient appliance.

On a dishwasher you will find two energy consumption figures displayed in the energy rating label. These figures are used to calculate running costs.

The energy consumption in the red box is based on the manufacturer's recommended water connection (usually cold). This figure includes both the electrical energy used by the dishwasher's internal water heater and that used during the wash cycle. The operating costs for cold water connection can be calculated simply by multiplying the energy consumption figure (kWh) by the current domestic electricity [tariff](#).

The energy figure in smaller prints is based on an alternative water connection, usually hot water only or dual hot/cold water connection. To calculate the energy cost for using your dishwasher on this setting, you must include both the energy used by the water heater to provide the hot water and that used by the dishwasher during the wash cycle.


Choice of water connection

A dishwasher can save more energy if it is connected to cold water only. The machine heats the water to 20 – 50° for the wash cycle and cold water is used for rinsing. A dishwasher consumes more energy if it is connected to hot water only as it will use hot water (about 60°C) for both washing and rinsing.

Handy hints

- Wait until you have a full load before running the dishwasher and use the economy cycle.
- Remove large food particles after dishes are taken from the table. If the dishes are to be washed immediately in the dishwasher no pre-rinsing is necessary.
- Select the lowest temperature or shortest running program on your machines that will satisfactorily wash the load.

- Use the detergent and rinse aid recommended by the dishwasher manufacturer and never exceed the recommended quantity.
- You can eliminate the drying cycle by opening the door after the final rinse and letting the dishes air dry.
- Make sure that the program is switched off before opening the door.
- Clean the dishwasher filter regularly.

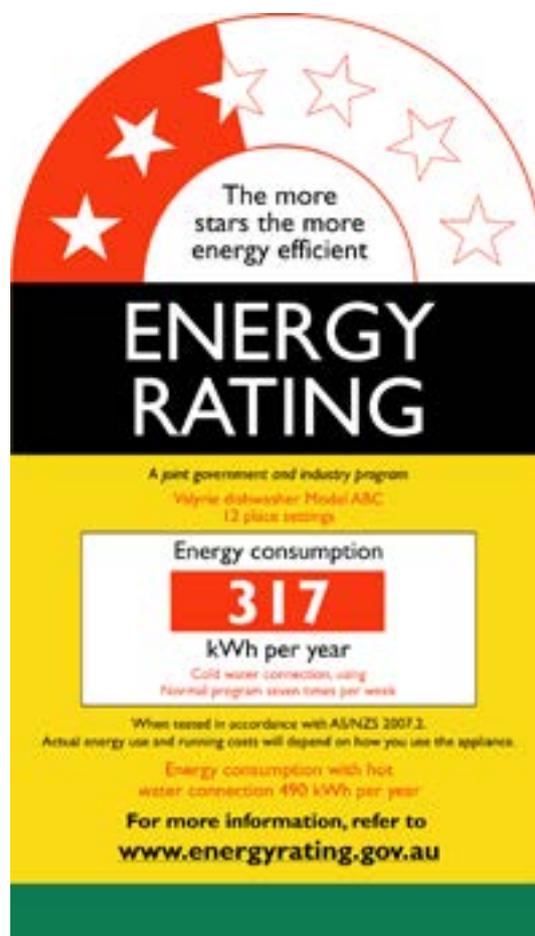

Virtual Energy Audit

Our [Virtual Energy Audit](#) is an easy way to see how much you can cut down your usage and pay less. Customise your virtual home to see how much electricity you are using in each room of your house, then look at your usage summary to see approximately how much electricity your household uses.