


ALL MINEX-C RMUS ARE FITTED WITH THE ANTI-BURST SYSTEM INSTALLED IN ALL RMUS SHALL BE RATED AT 24KV, REFER TO STANDARDS BULLETIN S01-061.

ALL CABLE DESTINATION AND SWITCH NUMBER TAGS SHALL BE ATTACHED TO THE RMU HORTSMANN COMPASS B FAULT INDICATORS SHALL BE FITTED TO SWITCH CUBICLE 1 ON EVERY MINEX-C RMU. COMPASS B FAULT INDICATORS SHALL BE FITTED WITH 3 PHASE CT'S. IF A SUMMATION CT IS FITTED REPLACE IT WITH ITEM NUMBER 501788 AND RECONFIGURE ALL CUBICLES SHALL BE FITTED WITH HORTSMANN WEGA 1.2C VOLTAGE INDICATORS.


ALL FUSES USED IN MINEX-C RMUS SHALL BE 292MM LONG DIN 43625 STANDARD. REFER

PHASE SEQUENCE IN T CUBICLES SHALL BE RED - WHITE - BLUE FROM LEFT TO RIGHT AS

DESCRIPTION	
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR	
CABLE DESTINATION TAG	
SWITCH ISOLATOR OPERATING MECHANISM	
EARTH SWITCH OPERATING MECHANISM	
SWITCH NUMBER TAG	
ABS OPERATION INDICATOR	
HORTSMANN COMPASS B FAULT INDICATOR	
RMU DATA NAME PLATE	
NSULATION SPARK TEST POINT	
NSULATION GAS PRESSURE INDICATOR	
USE SWITCH OPERATION MECHANISM	
USE EARTHING SWITCH OPERATION MECHANISM	
USE INDICATOR MIMIC	
SCREW-IN TYPE PALM CONNECTOR (SET OF 3) (#504912).	
POWER STANDARD DRAWING	-
FUWER STANDARD DRAWING	_
SWITCHGEAR	
DRIESCHER MINEX-C RMU	
SHEET 1 OF 3 TYPE KKTT	
S02-01-04-22_1 /3	
	7
00 CAD PRODUCT - DO NOT AMEND MANUALLY	T

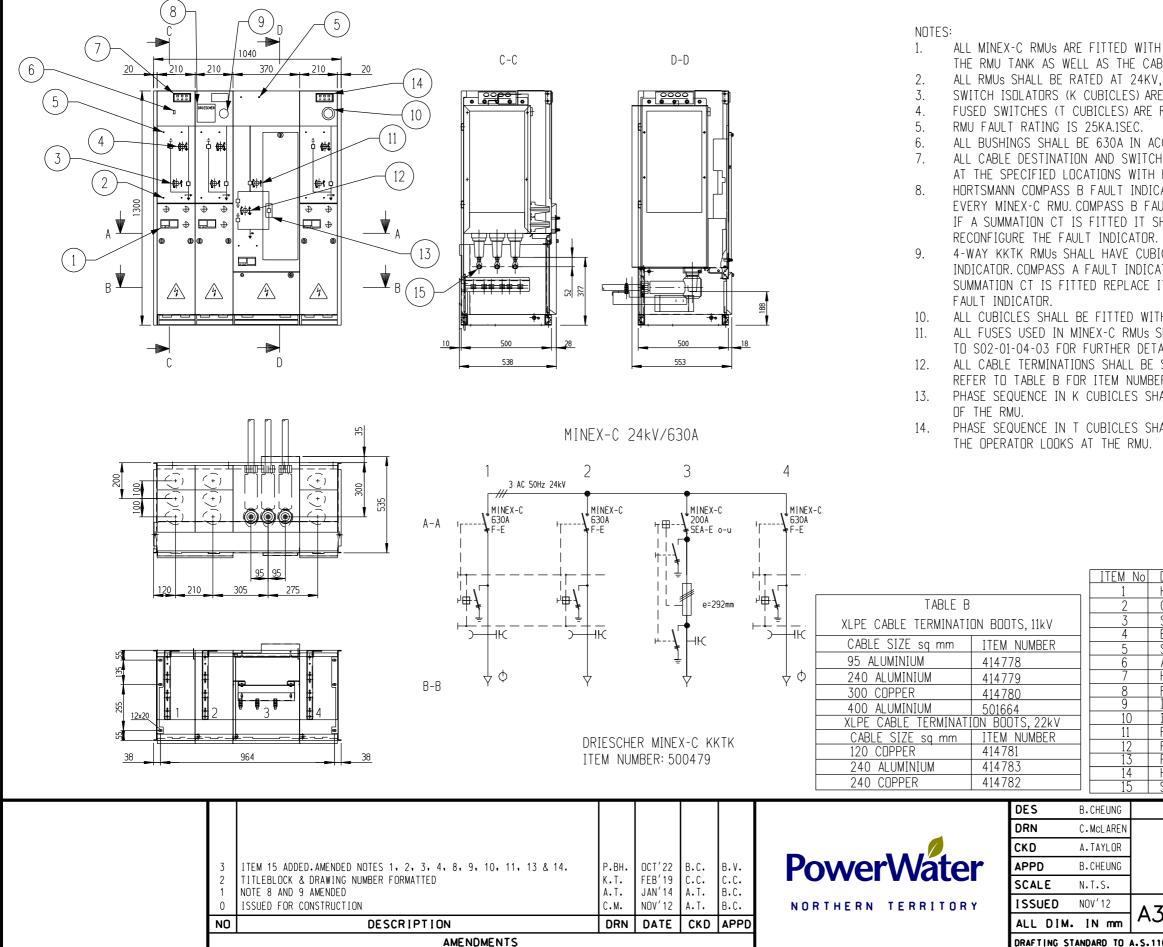

DESCRIPTION HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE INSULATION SPARK TEST POINT INSULATION GAS PRESSURE INDICATOR FUSE SWITCH OPERATION MECHANISM FUSE EARTHING SWITCH OPERATION MECHANISM FUSE INDICATOR MIMIC HORTSMANN COMPASS A FAULT INDICATOR SCREW-IN TYPE PALM CONNECTOR (SET OF 3) (*504912). POWER STANDARD DRAWING SWITCHGEAR DRIESCHER MINEX-C RMU SHEET 2 OF 3 TYPE KKTK 3 DRAWING NUMBER S02-01-04-22_2 CAD PRODUCT - DO NOT AMEND MANUALLY AMD
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE INSULATION SPARK TEST POINT INSULATION GAS PRESSURE INDICATOR FUSE SWITCH OPERATION MECHANISM FUSE EARTHING SWITCH OPERATION MECHANISM FUSE INDICATOR MIMIC HORTSMANN COMPASS A FAULT INDICATOR SCREW-IN TYPE PALM CONNECTOR (SET OF 3) (*504912). POWER STANDARD DRAWING SWITCHGEAR DRIESCHER MINEX-C RMU SHEET 2 OF 3 TYPE KKTK
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE INSULATION SPARK TEST POINT INSULATION GAS PRESSURE INDICATOR FUSE SWITCH OPERATION MECHANISM FUSE EARTHING SWITCH OPERATION MECHANISM FUSE INDICATOR MIMIC HORTSMANN COMPASS A FAULT INDICATOR SCREW-IN TYPE PALM CONNECTOR (SET OF 3) (*504912).
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISDLATOR DPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE INSULATION SPARK TEST POINT INSULATION GAS PRESSURE INDICATOR FUSE SWITCH OPERATION MECHANISM FUSE EARTHING SWITCH OPERATION MECHANISM FUSE INDICATOR MIMIC HORTSMANN COMPASS A FAULT INDICATOR SCREW-IN TYPE PALM CONNECTOR (SET OF 3) (*504912).
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE INSULATION SPARK TEST POINT INSULATION GAS PRESSURE INDICATOR FUSE SWITCH OPERATION MECHANISM FUSE EARTHING SWITCH OPERATION MECHANISM FUSE INDICATOR MIMIC
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE INSULATION SPARK TEST POINT INSULATION GAS PRESSURE INDICATOR FUSE SWITCH OPERATION MECHANISM
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR HORTSMANN COMPASS B FAULT INDICATOR RMU DATA NAME PLATE
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM SWITCH NUMBER TAG ABS OPERATION INDICATOR
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR CABLE DESTINATION TAG SWITCH ISOLATOR OPERATING MECHANISM EARTH SWITCH OPERATING MECHANISM
HORTSMANN WEGA 1.2C VOLTAGE PRESENCE INDICATOR
DESCRIPTION
IALL BE RED - WHITE - BLUE FROM LEFT TO RIGHT AS
ALL BE RED - WHITE - BLUE FROM THE FRONT TO BACK
STRAIGHT SCREENED DEAD-BREAK TERMINATIONS, ERS.
TH HORTSMANN WEGA 1.2C VOLTAGE INDICATORS. SHALL BE 292MM LONG DIN 43625 STANDARD.REFER AILS.
ICLE 4 FITTED WITH A HORTSMANN COMPASS A FAULT ATORS SHALL BE FITTED WITH 3 PHASE CT'S.IF A IT WITH ITEM NUMBER 501788 AND RECONFIGURE THE
CATORY PROVIDED SCREWS. CATORS SHALL BE FITTED TO SWITCH CUBICLE 1 ON ULT INDICATORS SHALL BE FITTED WITH 3 PHASE CT'S. SHALL BE REPLACED WITH ITEM NUMBER 501788 AND
H NUMBER TAGS SHALL BE ATTACHED TO THE RMU
H THE ANTI-BURST SYSTEM INSTALLED IN BLE COMPARTMENTS. , REFER TO STANDARDS BULLETIN S01-061. E RATED AT 630A. RATED AT 200A. CCORDANCE WITH DIN 47636. H NUMBER TAGS SHALL BE ATTACHED TO THE RMU FACTORY PROVIDED SCREWS.

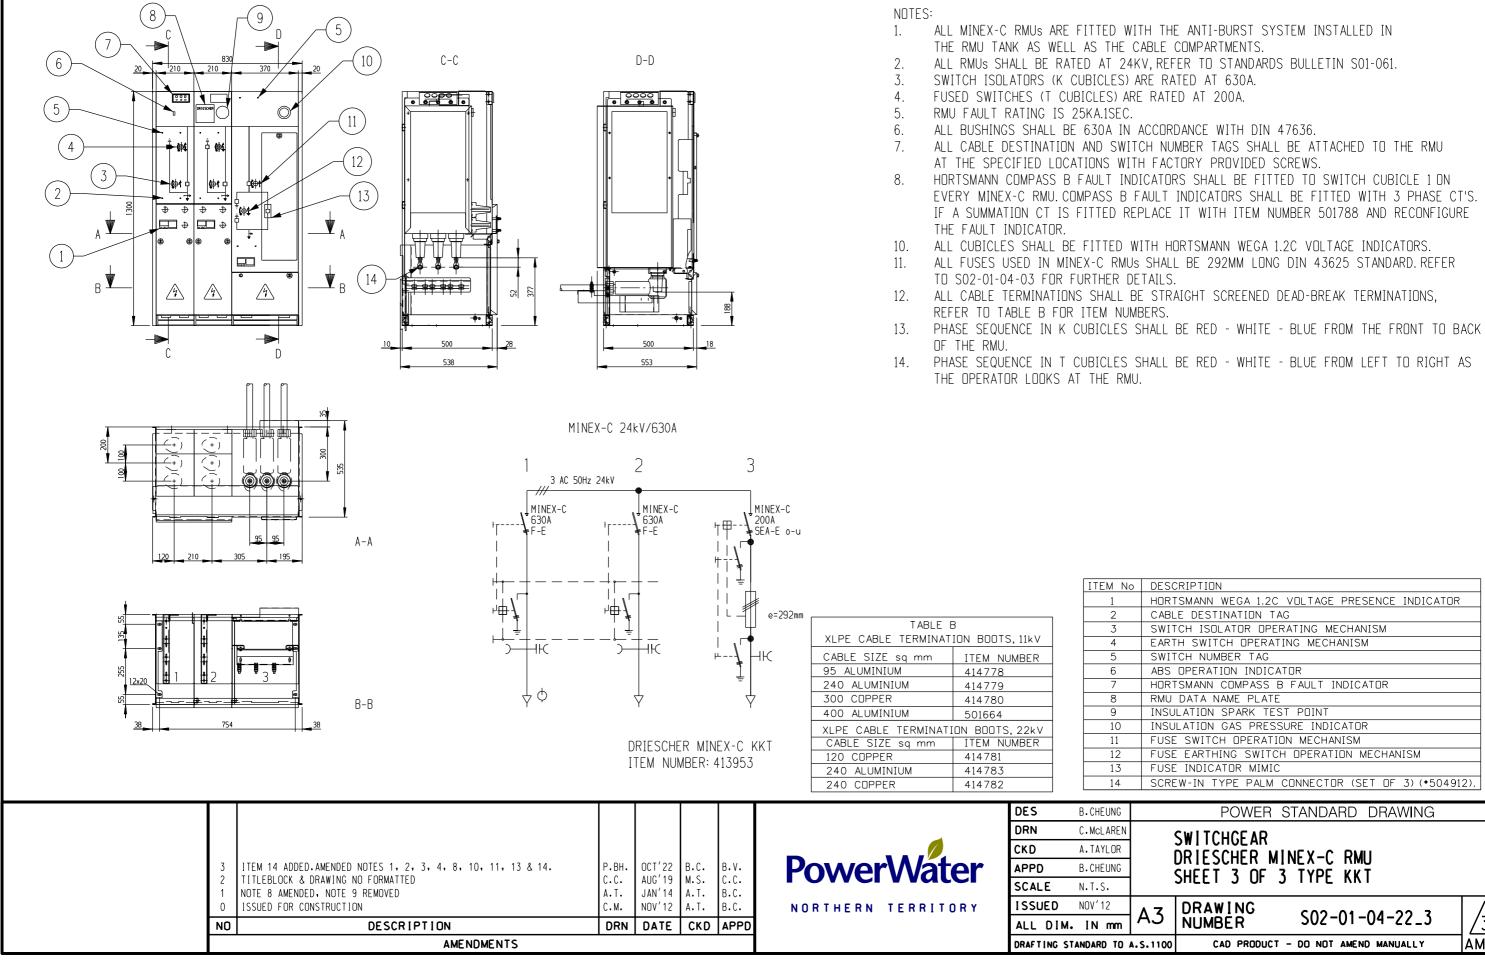

RMU DATA NAME PLATE	
INSULATION SPARK TEST POINT	
INSULATION GAS PRESSURE INDICATOR	
FUSE SWITCH OPERATION MECHANISM	
FUSE EARTHING SWITCH OPERATION MECHANISM	
FUSE INDICATOR MIMIC	
SCREW-IN TYPE PALM CONNECTOR (SET OF 3) (*504912).	
POWER STANDARD DRAWING	
SWITCHGEAR DRIESCHER MINEX-C RMU SHEET 3 OF 3 TYPE KKT	
3 DRAWING S02-01-04-22_3	3
1100 CAD PRODUCT - DO NOT AMEND MANUALLY AM	DT